

Radio Remote Control Systems



Description

A Range of general purpose remote control systems

Installation simply requires connections to power supply and the output relay screw terminals. The output relays are activated by the button press on the transmitter encoder.

Housed in a rugged IP68 weatherproof enclosure, the receiver has the capacity to learn up to 15 transmitter button pairings. These are memorised even if the power is removed.

Each individual switch on each of the transmitters may be paired with any or all of the receiver relay outputs.

The decoder is supplied in an IP68 rated enclosure with Cable Gland and wall mounting lugs.

Applications

- Lighting Control
- General Purpose Remote Switching
- Industrial remote Switching
- Access Control

Features

- 1,2,4 or 8 Channel Systems
- 12 / 24Vdc or 230Vac Supply
- Range
 - FireFly up to 100 metres
 - FireBlade up to 1,000 metres
- Reliable FM Technology
- High Security RF Protocol
- 'Easy Learn' Tx Encoder Feature
- Easy Installation Via Screw Terminals.
- 4 Relays 6A @ 230Vac
- Momentary / Latch / Timed Outputs
- Timed Output Adjustable 0 To 5 mins
- Any Switch 'Maps to Any Relay Output
- Receiver Rated IP68
- Versatile operation modes: Many to Many, One to Many, Many to One.

FIREFLY / FIREBLADE



FireFly Systems LOS Range 100m



Part Number	Description	Freq (MHz)	Range** (Metres)
FIREFLY-S1	FM RC System 1 ch	433.92	100
FIREFLY-S2	FM RC System 2 ch	433.92	100
FIREFLY-S4	FM RC System 4 ch	433.92	100

Additional FireFly Transmitters



Part Number	Description	Freq (MHz)	Range** (Metres)
FIREFLY-TX1	Transmitter 1 switch	433.92	100
FIREFLY-TX2	Transmitter 2 switch	433.92	100
FIREFLY-TX4	Transmitter 4 switch	433.92	100
FIREFLY-TX8	Transmitter 8 switch	433.92	100
FIREFLY-TX-IPKIT	Belt Clip and 'O' Ring, Seals Transmitter to IP67		

FireBlade Systems LOS Range 1,000m



Part Number	Description	Freq (MHz)	Range** (Metres)
FIREBLADE-S1	FM RC System 1 ch	434.525	1,000
FIREBLADE-S2	FM RC System 2 ch	434.525	1,000
FIREBLADE-S4	FM RC System 4 ch	434.525	1,000

Additional FireBlade Transmitters



Part Number	Description	Freq (MHz)	Range** (Metres)
FIREBLADE-TX1	Transmitter 1 switch	434.525	1,000
FIREBLADE-TX2	Transmitter 2 switch	434.525	1,000
FIREBLADE-TX4	Transmitter 4 switch	434.525	1,000
FIREBLADE-TX8	Transmitter 8 switch	434.525	1,000
FIREFLY-TX-IPKIT	Belt Clip and 'O' Ring, Seals Transmitter to IP67		

** Range stated is optimum, direct line of sight. In worst conditions this can be reduced significantly.

Custom Options


These systems may be supplied as OEM units. Both transmitter and receiver use overlay stickers as part of the assembly which may easily be customised to incorporate any other logo etc. Please contact our sales dept for further information.

Power Supply

This unit is designed to be a fixed installation, operated from either 12/24Vdc or 230Vac. Under no circumstances should the receiver be connected to more than one supply. Before removing the cover ensure that the mains input supply is isolated. Maintenance to the product that involves removal of the cover should only be carried out by a competent person or qualified electrician.

Data Outputs


Each output relay provides an isolated switch. Connections are Common (COM), Normally Open (NO) and Normally Closed (NC).

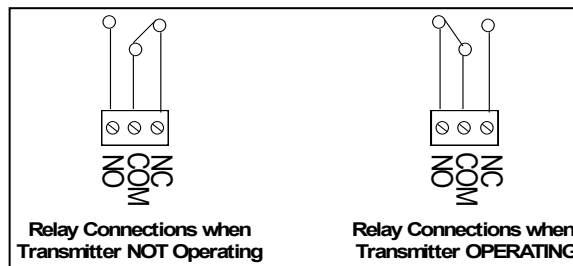

Connecting a Relay output to an Application

Below is a simple example showing one possible way to wire a relay in order to give switched power to an external load:

When the relay is energised the 'COM' connects to 'NO' and power is applied to the Load.

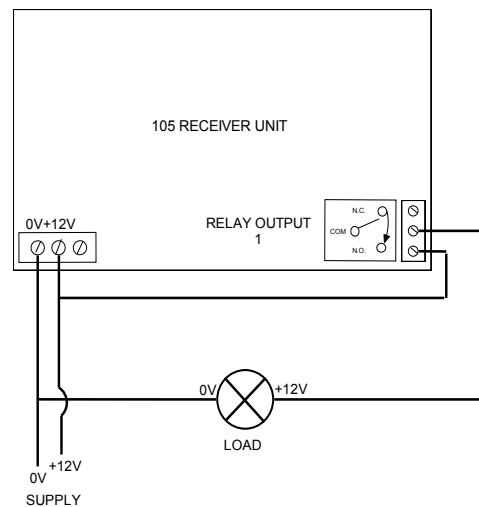

Pairing a Transmitter to a Receiver

Each transmitter has a unique identity. Each time a switch is pressed, the transmitter emits a highly secure RF signal (appears as a random encrypted data stream). The Receiver can learn this encrypted signal and allocate to an output.

Any transmitter switch may be paired to one or many of the receiver's outputs, or a transmitter single switch may be paired to any number of receiver's outputs to enable a powerful and flexible remote control system.

The only limitation is that each receiver has a maximum capacity of 15 pairings, these can be from the same or any number of transmitters.

Hint: the same transmitter may be taught to any number of receivers to create 'master keys'.

To learn a new transmitter switch follow this procedure

Any transmitter button can be learnt to one or many of the receiver output relays.
Each button must be learnt to each relay individually by following this procedure:


1. To select the receiver output relay to learn to:
 - a. Briefly press the receiver Learn switch (SW1) once
 - b. The Learn LED will flash once to indicate output relay 1 is selected
 - c. After the LED stops flashing, press the Learn switch again to select the next relay channel
 - d. Repeat step c until the required output relay is selected.
2. Press the button on the transmitter you want to learn to the relay output.
3. The Learn LED will then illuminate, press the same transmitter button again.
4. The Learn LED will then flash to indicate learning is complete.
5. To test the operation, press the transmitter button again and you will hear the relay 'click' as it operates.

Erasing Receivers Memory

1. Press and hold the receiver Learn Switch for approx 10 seconds.
2. When the Learn LED turns OFF all memory is erased
3. This is factory default state which is indicated by all output LED's flashing together.

NOTE: You cannot erase individual Tx encoders

Receiver Outputs

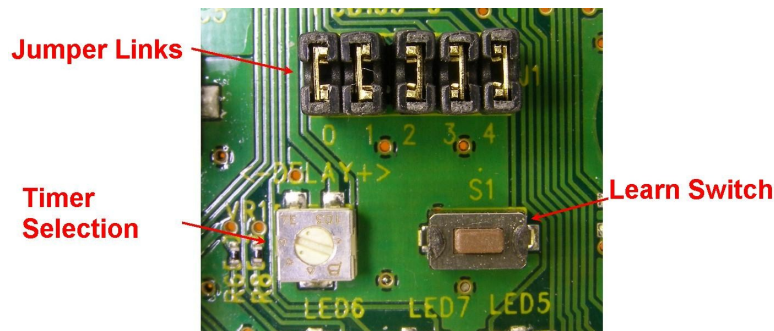

The jumper links configure the outputs to be Momentary, Latching or Timed.
The jumper links are made / removed by a small link 'cap' placed over the pin header.

Jumper Links (LK2 - 4)	Outputs 2 - 4
Open	Mom (The Output operates for as long as the transmitter switch is held on)
Connected	Latch (The Output changes state each time the Transmitter is operated)

LK0	LK1	Relay Output 1 Only
Open	Open	Momentary
Open	Connected	Output 1 Latching
Connected	Open	Fixed to ½ Second Momentary o/p
Connected	Connected	Output 1, 0 to 5 minutes using Timer selection Potentiometer.

Technical Specifications

Transmitters : FireFly, FireBlade

Enclosure Rating: Standard IP40 (TBC)
With IPKit IP65 (TBC)

Battery Type: CR2032 (supplied)

Dimensions: 90 x 54 x 27 mm (Note: FireBlade is supplied with external Antenna)

Electrical Characteristics	Min	Typical	Max	Units
Supply Voltage		3V		V
Supply Current				mA
Frequency: FireFLY: Wideband	433.1	433.920	434.7	MHz
FireBLADE: Narrowband	434.450	434.525	434.600	
RF Output Power (ERP) @ 433 MHz	-	3	10	mW

Receiver Decoder

Enclosure Rating IP68

Dimensions 169 x 132 x 85mm (not including antenna)


Storage Temperature: -10 to +70° Celsius.

Operating Temperature: 0 to +55° Celsius.

ELECTRICAL CHARACTERISTICS	MIN	TYPICAL	MAX	DIMENSION
Supply Voltage for +12 v	10	12.0	16	Vdc
Supply Voltage for +24 v	22	24.0	28	Vdc
Supply Voltage for 230Vac		230		Vac
Relay Rating* (230Vac) RLY1-4		5	12	A
Supply Current : Quiescent		16		mA
All relays operating*		140		
Time delay from Tx on Switch to Rx Relay operation			100	mS
Time delay from Tx sw relax to Rx Relay release			300	MS

*The relay contacts in this unit are for functional use only and must not be used for isolation purposes

Receiver Mechanical Dimensions

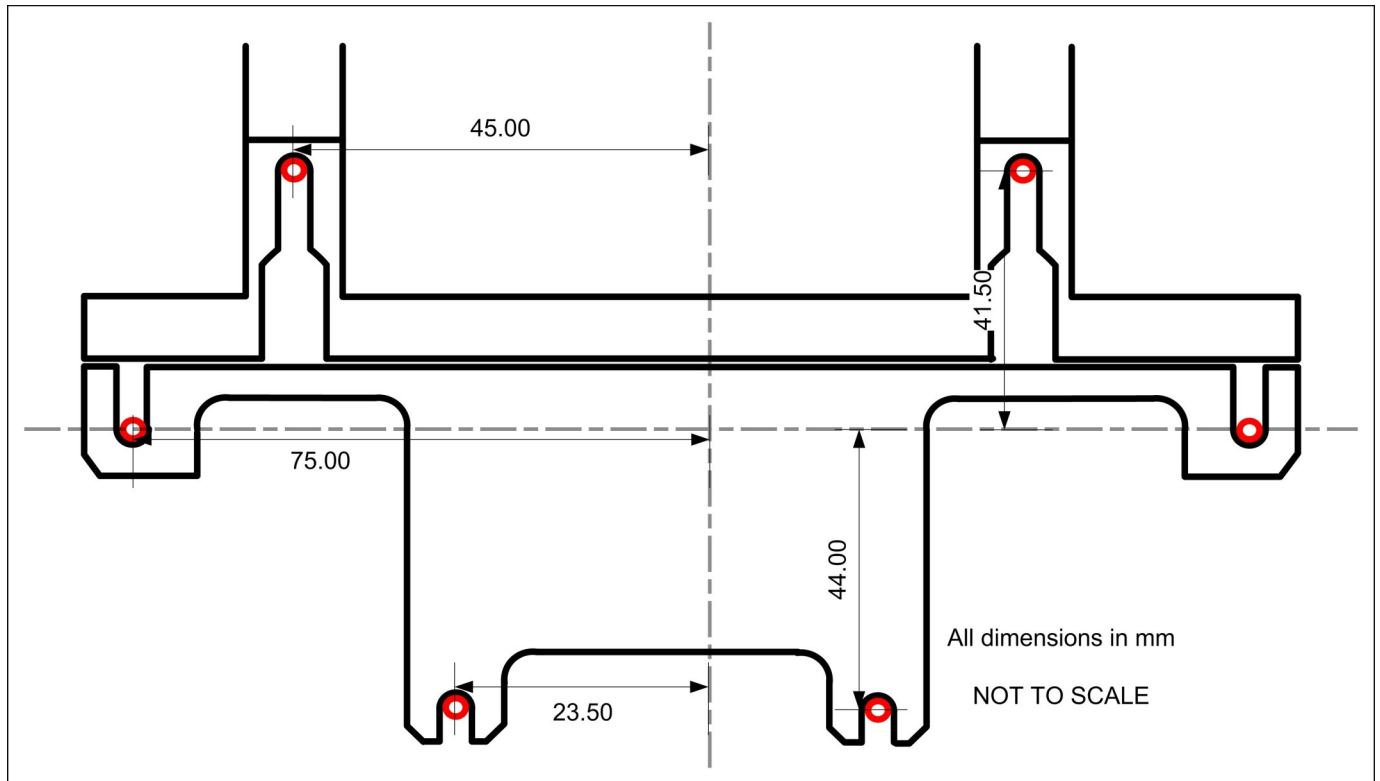

RF Solutions Ltd. Recycling Notice Meets the following EC Directives:

DO NOT

Discard with normal waste, please recycle.

ROHS Directive 2002/95/EC

Specifies certain limits for hazardous substances.

WEEE Directive 2002/96/EC

Waste electrical & electronic equipment. This product must be disposed of through a licensed WEEE collection point. RF Solutions Ltd., fulfills its WEEE obligations by membership of an approved compliance scheme.

Waste Batteries and Accumulators Directive 2006/66/EC

Where batteries are fitted, before recycling the product, the batteries must be removed and disposed of at a licensed collection point.

Environment Agency producer registration number: WEE/JB0104WV.

Disclaimer:

Whilst the information in this document is believed to be correct at the time of issue, RF Solutions Ltd does not accept any liability whatsoever for its accuracy, adequacy or completeness. No express or implied warranty or representation is given relating to the information contained in this document. RF Solutions Ltd reserves the right to make changes and improvements to the product(s) described herein without notice. Buyers and other users should determine for themselves the suitability of any such information or products for their own particular requirements or specification(s). RF Solutions Ltd shall not be liable for any loss or damage caused as a result of user's own determination of how to deploy or use RF Solutions Ltd's products. Use of RF Solutions Ltd products or components in life support and/or safety applications is not authorised except with express written approval. No licences are created, implicitly or otherwise, under any of RF Solutions Ltd's intellectual property rights. Liability for loss or damage resulting or caused by reliance on the information contained herein or from the use of the product (including liability resulting from negligence or where RF Solutions Ltd was aware of the possibility of such loss or damage arising) is excluded. This will not operate to limit or restrict QuasarUK Ltd's liability for death or personal injury resulting from its negligence.